


IMPORTANT

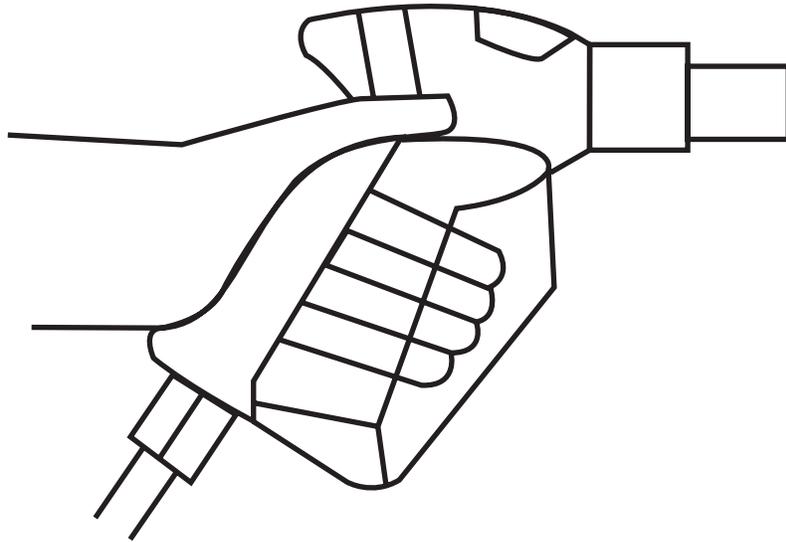

**WHEN STARTING
PRESSURE WASHER,
GUN TRIGGER MUST
BE SQUEEZED!!**