
# ASSEMBLY INSTRUCTIONS FOR AW-5740-0011 WHEEL KIT 6 7 8 (Fig. 1) 3) (Fig.

(Fig. 4)

(Fig. 2)

### PARTS LISTING FOR AW-5740-0011

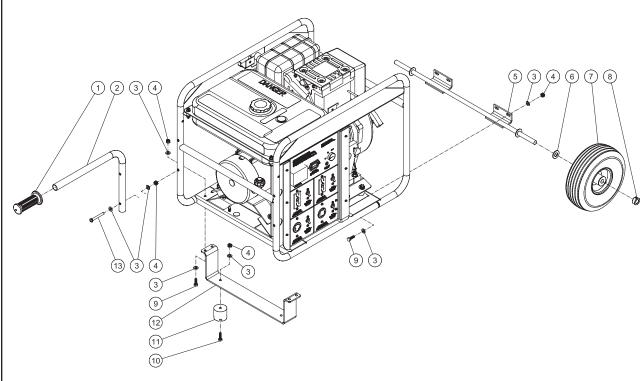

AW-5740-0011-09242								
AW-5740-0011 WHEEL KIT								
ITEM	DESCRIPTION	Mi-T-M #	QTY		ITEM	DESCRIPTION	Mi-T-M #	QTY
1	HANDLE GRIP	7-0167	2		8	COLLAR	33-0351	2
2	HANDLE ASSEMBLY	7-0188A18	2		9	BOLT	27-0067	8
3	WASHER	28-0003	26		10	BOLT	27-0068	2
4	LOCKNUT	30-0157	14		11	ISOLATOR	14-0008	2
5	AXLE	20-1109A18	1		12	UNDERBRACKET	20-1108A18	1
6	WASHER	28-0008	2		13	BOLT	27-0073	4
7	WHEEL	14-0162	2					

## **AWARNING**

**Warning:** This product contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm

Wash your hands after handling this product.

# **AWARNING**

This product contains one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

### **ASSEMBLY FOR WHEELS AND HANDLES:**

Use the following items for installation: Isolator (11), 1 1/4" Bolts (10), Locknut (4), Underbracket Assembly (12), 1" Bolts (9), 5/16 Washers (3), Collar/Shaft (8), Wheels (7), 5/8" Washers (6), Axle Assembly (5), 2 1/2" Bolts (13) and Handle Assembly (2).

- 1. Raise the generator off the work surface to allow clearance to mount the Wheel Kit onto the unit.
- NOTE: Make sure the generator is stable and secure before installing the Wheel Kit.
- Assemble the Isolators (11) to the Underbracket Assembly (12) using two Locknuts (4), two 5/16" Washers (3) and two 1 1/4" Bolts (10), tighten bolts securely. (See Fig. 1)
- 3. Using four Locknuts (4), eight 5/16" Washers (3), and four 1" Bolts (9) assemble the Underbracket Assembly (12) onto the alternator end of the generator. Tighten all bolts securely inside of rail. (See Fig. 1)
- 4. Fasten the Axle Assembly (5) to the engine end of the generator using four 1" Bolts (9), eight 5/16" Washers (3) and four Locknuts (4). Tighten all bolts securely. (See Fig. 2)
- Using two Collars (8) and two 5/8" Washers (6) mount both Wheels (7) onto the generator. Make sure the axle is centered with the generator. (See Fig. 3)
- 6. Attach the Handle Assemblies (2) to the frame using four 2 1/2" Bolts (13), eight 5/16" Washers (3), and four Locknuts (4), tighten bolts. (See Fig. 4)